


## General Notes


Install three (3) bollards as shown on plan above. Coordinate actual location in field with COR and utility company.

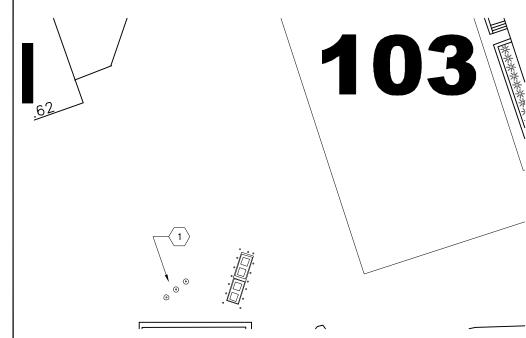

4 \ OPTION - BOLLARDS AT UTILITY SERVICE ENTRANCE - BLDG 1 SCALE: 1" = 200"

## General Notes


Install three (3) bollards as shown on plan above. Coordinate actual location in field with COR and utility company.

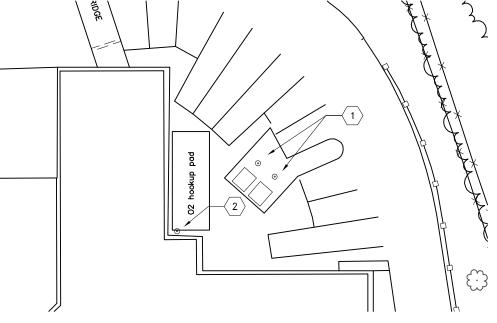

2 BOLLARDS NEAR OXYGEN CONNECTION AND XFMRS NW-03 / SCALE: 1" = 200"


## General Notes

- Install two (2) bollards as shown on plan above near the existing transformers. Coordinate actual location in field with COR and utility company.
- Install one (1) bollard as shown on plan above near the existing Emergency Oxygen service entrance. Coordinate actual location in field with COR.

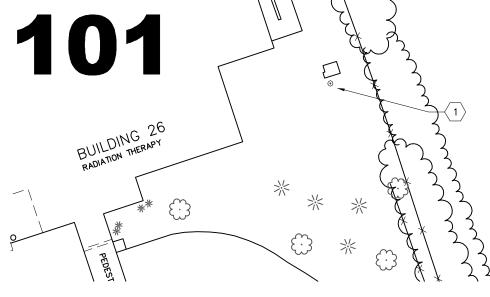

3 OPTION - BOLLARD NEAR XFMR NW-03 SCALE: 1" = 200" General Notes

Install one (1) bollard as shown on plan above near the existing transformers. Coordinate actual location in field with COR and utility company.

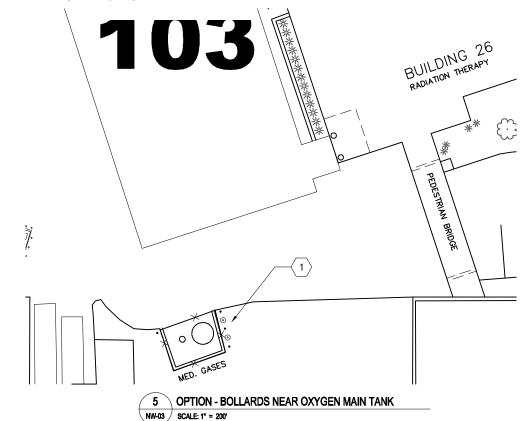

General Notes

OPTION — Install one (1) bollards a shown on plan above near the existing transformers. Coordinate actual location in field with COR and utility company.

**CONSULTANTS: ARCHITECT/ENGINEERS:** NEW WORK SECURITY MEASURES AT UTIL - SECURITY **STRATTON** BULK OXYGEN TANK CORAL & UTILITY LOCATIONS LOCATION OF BOLLARD INSTALLATIONS SITE MEDICAL CENTER Location ALBANY, NEW YORK Approved: Project Director NW-03 MARCH 18, 2013